


# How to Make A Tape Delay for 2 Sony Walkman Pro Cassette Recorders by Richard Lerman © 1983, 2006

cut narrow slits in the sides of the cassettes here to let the tape pass between them

it is very important to cut the splines off of the feed part of this cassette. The tape will go around this hub inside the cassette and it will spin freely. Use an exacto blade for this.....

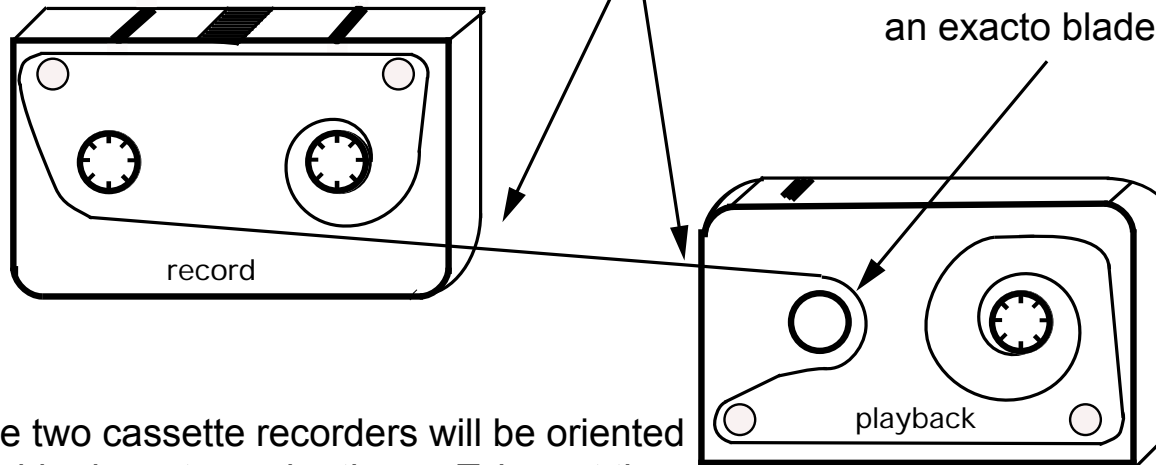

Photos showing the assembly of the delay follow. If you use this, please make a donation to Amnesty International, Doctors w/o Borders or a local Arts Organization

The two cassette recorders will be oriented upside down to each other.....Take out the batteries and run from the DC voltage input. I use a pack of 4 C-cells to run both at once. When rewinding the cassette system, I have found it easiest to remove the playback cassette and hold in your hand while rewinding the Record Cassette.

RLerman 'at' asu.edu




Notice that batteries MUST be removed so tape clear Walkman housing. It's easier to use a 6 volt c-cell supply than the two battery packs.



cassette pad (this one's clear)




## Record Cassette

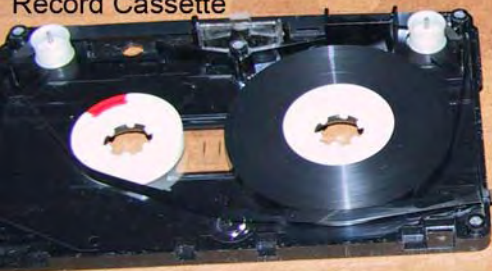

Place the two cassette pads on top of each cassette, then the cover and then the 5 screws.

notice that splines on this cassette hub have been removed

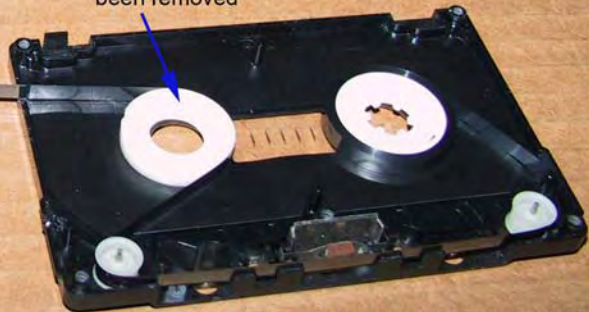

Playback Cassette

Record Cassette





Playback  
Cassette

